# LK.22.01.01 Manual User

attention: watch the video on the usb flash key for frequency setting

connect the power cable to a 5V USB type power source. A PowerBank or a laptop USB socket or a 5V 1A USB power supply can be used

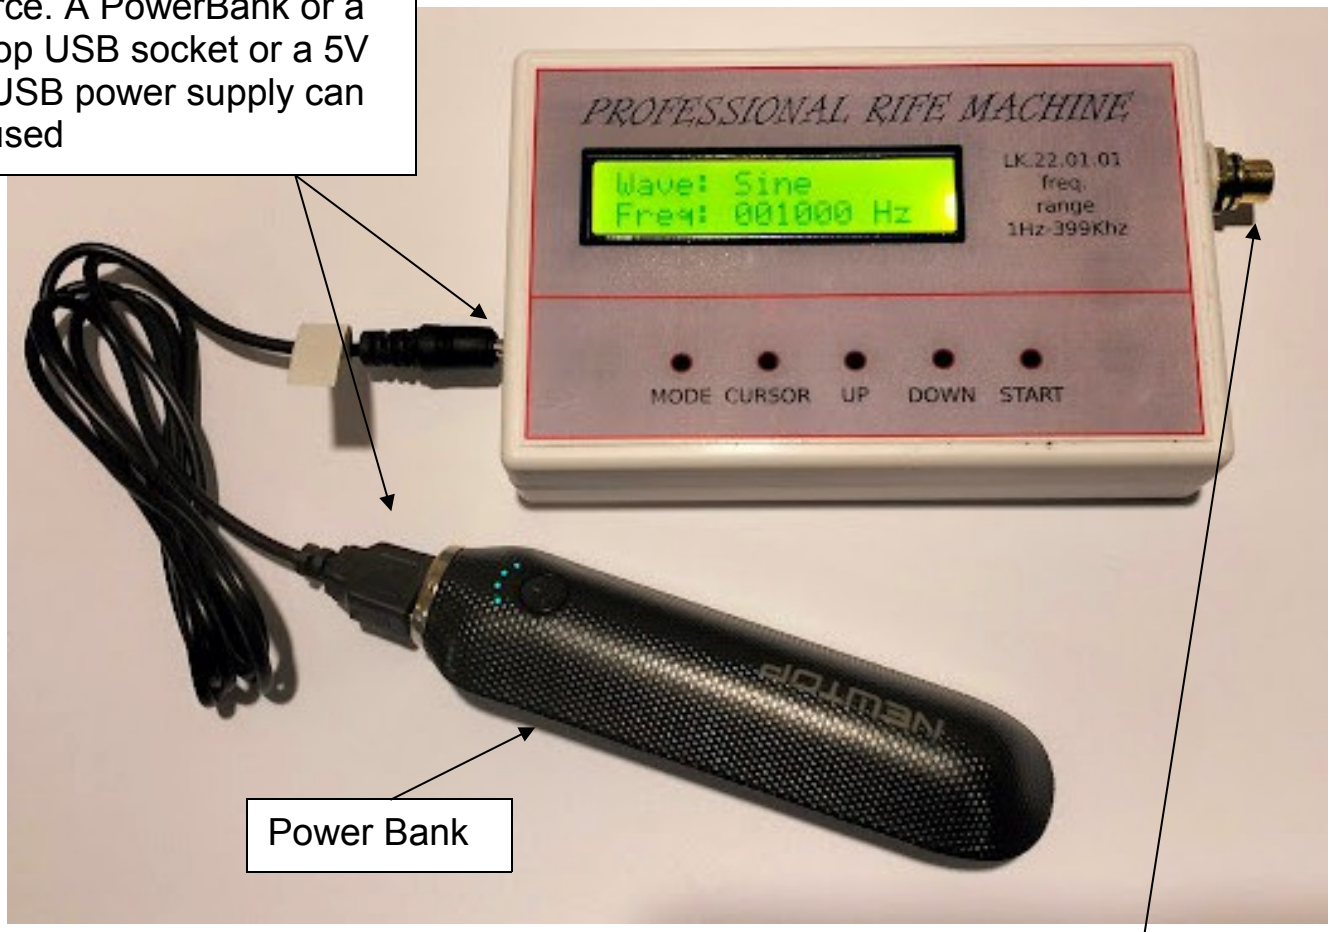


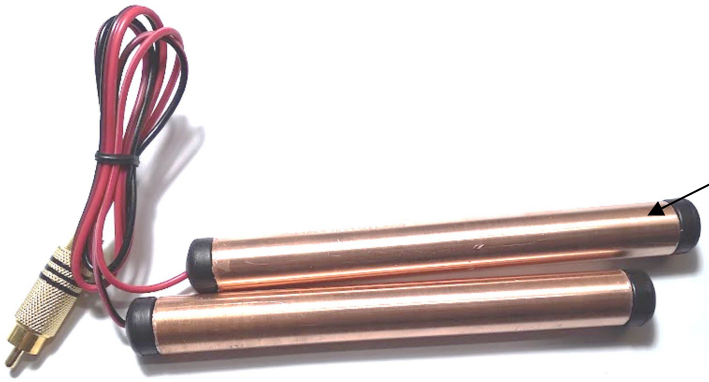

connect the copper electrodes to the RCA type connector

often clean the copper electrodes with a normal abrasive pad.
Do not use hand cream as it reduces the conductivity of the skin.
Always wash your hands before doing the sessions

**I recommend doing 15-minute sessions every day.**
**The Rife Machine works with Micro currents and it is normal not to feel vibration.**
**Only in some parts of the body with adhesive electrodes can you feel a slight discomfort (vibration)**

# Setting up the Machine as a Rife Machine

1 Press "MODE" key to select "SINE" sine waveform

2 use the "CURSOR" and "UP" "DOWN" keys to set the desired frequency expressed in HZ

3 Press the "START" button and when you no longer see the blinking cursor, the Rife begins to emit the frequency.
By pressing the "START" key again when the cursor is blinking, the machine is in standby mode and does not emit the frequency.

**in the USB flash drive there are 4 books in PDF with the list of pathologies and the relative frequencies to be used**

# Setting up the Machine as a Hulda Regehr Clark (Zapper)

1 Press "MODE" key to select "SQUARE" sine waveform

do the sessions alternating the frequencies of 2500 and 30000Hz every day

For all other settings use the Rife Machine manual